

Dry Micro-diffusion



HAM1B STAINLESS STEEL CABINET

NF T 72-281 Standard



www.hygiasept.com

HygiaSept
L'hygiène active

DESCRIPTION & ADVANTAGES OF THE HAM1B STAINLESS STEEL CABINET

The HAM1B stainless steel cabinet is a completely programmable diffuser which guarantees an effective treatment of volumes and surfaces at a scheduled time out of the working hours of the staff. It is therefore possible to set protocols for routine treatments. The HAM1B stainless steel cabinet benefits from a great diffusion power.

SPECIFICATIONS

•STAINLESS STEEL CABINET

- Dimensions front side (H x L) 580 x 434 mm / Width 240 mm.
- Empty weight : 23,6 kg.
- Overall weight (with jerrycans) : 27,8 kg.
- Door with lock and key.
- IP 55.

•POWER SUPPLY

- 230 Vac.
- 1 compressor CP 30 220V
- ON-OFF switch
- Door safety switch.

DIFFUSION

Compressor power : 120 W.

Outlet pressure : 3,5 bars.

Power supply : 230 Vac


Container : 2 litre jerry can

Nozzle : Delrin


Titanium injector

Automatic bleeding of the diffusion circuit at the end of each cycle.

Flashing light indicating that the product container is empty.

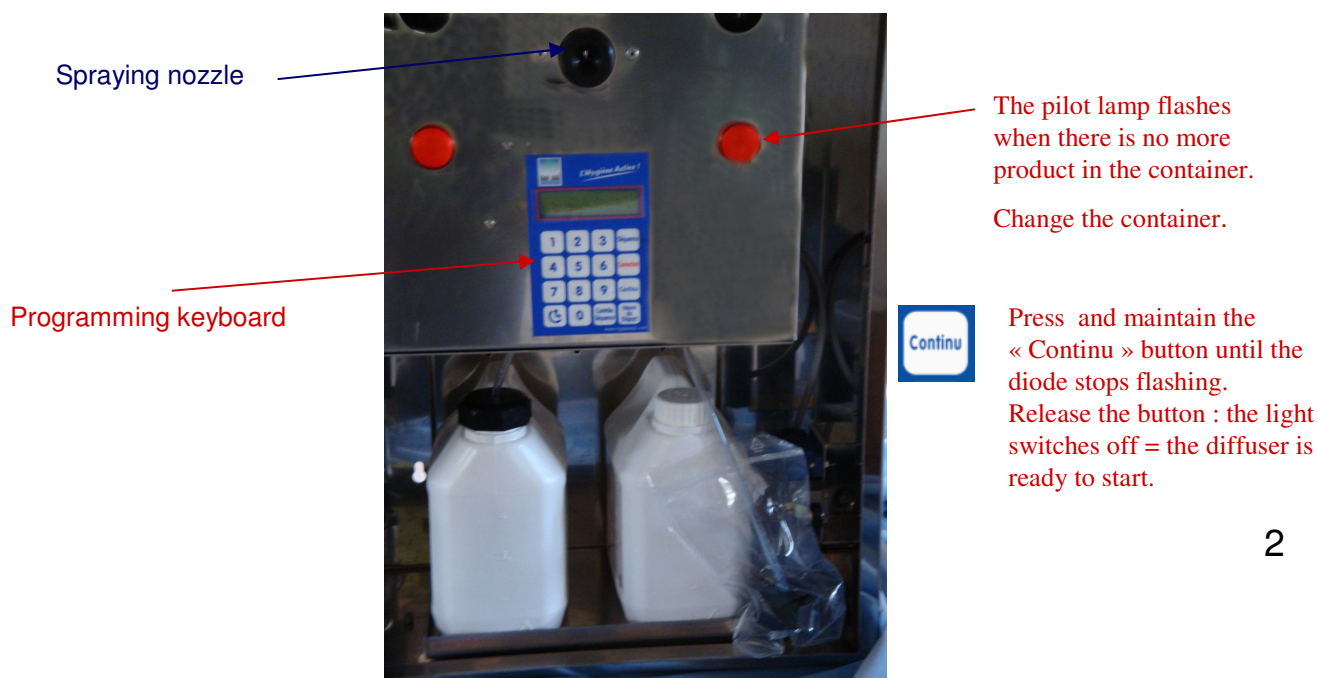

PROGRAMMING KEYBOARD

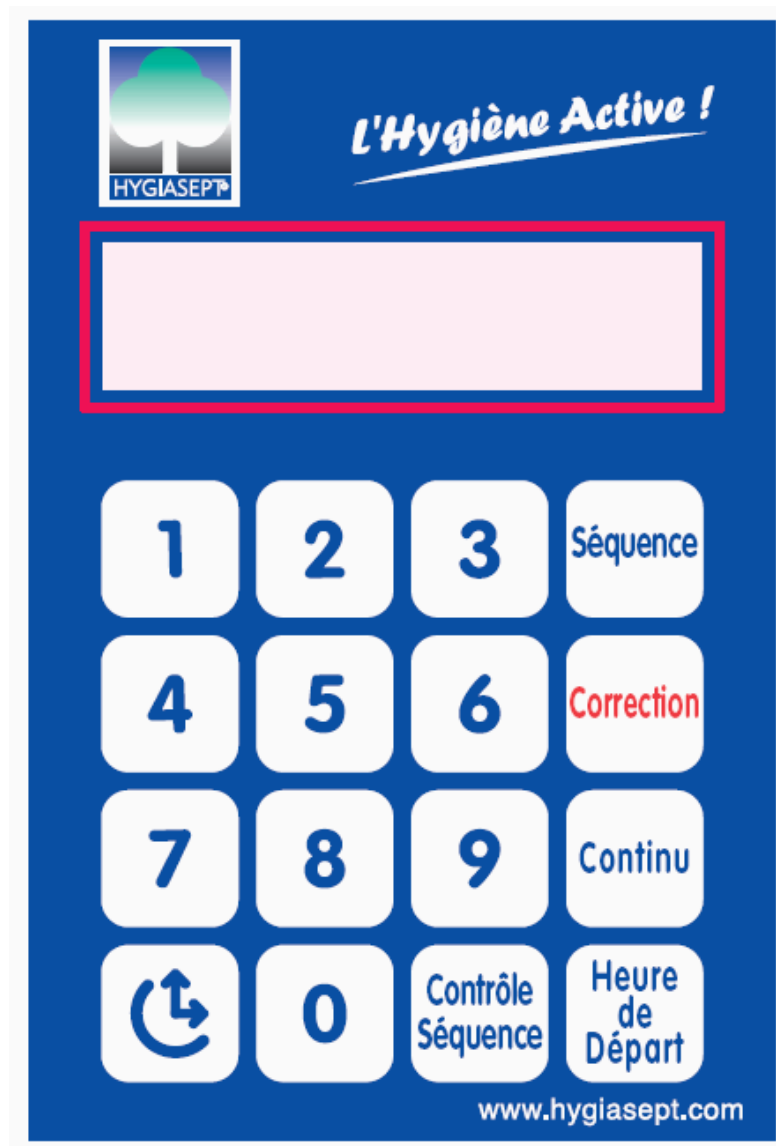

CHANGING THE TIME OF THE DIFFUSER



Press the button here on the left.

Set progressively when the screen shows :
the year, the month, the day, the time, minutes and seconds.

Integrally automatic programming

Setting sequences




Press the « Séquence » button. The screen shows :




Keyboard 01 (it is compulsory to have 0 before 1).


Then the screen automatically shows :




Keyboard spraying time as follows : HH : MM : SS waiting for the screen to show the two points before doing the same for hours, minutes and seconds. Ex :



Press the « Continu » button.
The screen shows :



Keyboard sleeping time as follows: HH : MM : SS.
Example : 00 : 00 : 10 for 10 seconds sleeping time (interruption) between two diffusion cycles :



Press the « Continu » button. The screen shows the sleeping time which has just been dialled and waits for the number of repetition (total number of diffusions).



Example : 02 for 2 repetitions. (Attention ! It is compulsory to have two figures : 01 for one time, 02 for twice, 03 for three repetitions, etc...)



Press the « Continu » button : the screen shows the date and time : go to the next stage, that is selecting the time at which the sequence will begin.



Selecting the time for the sequence to start

Press the « **Heure de départ** » button.

Keyboard starting time as follows : 2 figures for hours, 2 figures for minutes and 2 figures for seconds (format HH : MM : SS). Two points separate each value :



Then the screen shows the time :



The screen automatically shows the date and time :



Press the « **Heure de départ** » button at any time .

FOR DISINFECTION

HYGIASEPTYL® SPRAY / DS & HYGIASEPTYL® SPRAY PLUS

(See technical and safety data sheets)

	HYGIASEPTYL SPRAY HYGIASEPTYL DS (Medical devices)	HYGIASEPTYL SPRAY PLUS
Bactericidal activity proved according to standards: EN 1040 EN 1276 NF T 72-171 (Spray Plus) NF 72-281	<i>Escherichia coli</i> <i>Enterococcus hirae</i> <i>Legionella pneumophila</i> <i>Pseudomonas aeruginosa</i> <i>Salmonella enterica</i> <i>Staphylococcus aureus</i> <i>Mycobacterium smegmatis</i>	<i>Escherichia coli</i> <i>Enterococcus hirae</i> <i>Pseudomonas aeruginosa</i> <i>Salmonella enterica</i> <i>Staphylococcus aureus</i> <i>Mycobacterium smegmatis</i>
Sporicidal activity proved according to standard: NF T 72-231		<i>Bacillus cereus</i> <i>Bacillus subtilis var. niger</i> <i>Clostridium sporogenes</i>
Virucidal activity proved according to standards: NF T 72-180 EN 14476	Entérovirus polio 1 Adénovirus type 5 Orthopoxvirus de la vaccine Influenza Virus Type A-H1N1	Entérovirus polio 1 Adénovirus type 5 Orthopoxvirus de la vaccine
Fungicidal activity proved according to standards: EN 1275 EN 1650 NF T 72-281	<i>Candida albicans</i> <i>Aspergillus niger</i> <i>Penicillium verrucosum</i>	<i>Candida albicans</i> <i>Aspergillus niger</i> <i>Penicillium verrucosum</i>

FOR DISINFECTION

HYGIASEPTYL® FOOD SPRAY

(See technical and safety data sheets)

Bactericidal activity proved according to standards: EN 1040 NF T72-151 NFT 72-171 spectre 4 (eau dure 30°F)	<i>Escherichia coli</i> <i>Staphylococcus aureus</i> <i>Enterococcus hirae</i> <i>Pseudomonas aeruginosa</i>
Bactericidal activity proved according to standard: NF T 72-301	<i>Salmonella enterica</i> <i>Listeria monocytogenes</i> <i>Lactobacillus plantarum</i>
Fungicidal activity proved according to standards: EN 1275 NF T 72-201	<i>Candida albicans</i> <i>Penicillium verrucosum</i> <i>Cladosporium cladosporioides</i> <i>Abisidia corymbifera</i>

FOR ODOUR DESTRUCTION - HYGIASEPTYL® DMO

(See technical data and safety data sheets)

Long-lasting, preventative and curative action, DMO gives off a pleasant perfume.

Immediate results.

As a result of its ever present, light and fresh-smelling composition as well as its specific formulation, DMO is synonymous with cleanliness and hygiene.

DMO has a double action:

It acts on existing molecules,

It slowly releases active components thus assuring effective action for several days.

It is a technological and ecological product that acts on polluted surfaces by migration and diffusion.

FOR DISINSECTISATION-HYGIASEPTYL® BA INSECTICIDE

(See technical data and safety data sheets)

Micro-encapsulated bifenthrin is an insecticide which operates especially by contact but also by ingestion.

Thanks to encapsulation and a great light stability, bifenthrin makes a very long-lasting protection possible.

Only Hygiaseptyl® product range to be used.

All use of products not recommended by HYGIASEPT® leads to invalidation
of guarantee.

We take no responsibility for uses other than that covered by these
instructions.

HYGIASEPT® diffusers are guaranteed for one year.

HYGIASEPT

Commercial Division of the company named « Hygiène et Nature ».

16, Rue René Dodille

71100 SEVREY – FRANCE

Tel : +33 (0) 3 85 92 92 20 / Fax : +33 (0) 3 85 92 92 56

Email : gestion@hygiasept.com

Website : www.hygiasept.com

